

Induction Hob

User manual

NZ84T9770EK



SAMSUNG

Contents

Using this manual	3	Operation	18
The following symbols are used in this User Manual:	3	Using the touch buttons	18
Model name & serial number	3	Switching the appliance on	18
Safety instructions	3	Select cooking zone and power level setting	18
Disposing of the packaging material	7	Switching the appliance off	19
Proper disposal of your old appliance	7	Quick stop	19
Correct Disposal of This Product (Waste Electrical & Electronic Equipment)	7	Using the child safety lock	19
Installing the hob	8	Timer	20
Safety instructions for the installer	8	Using keep warm	21
Connecting to the mains power supply	8	Power boost	22
Installing into the countertop	9	Power management	22
Components	11	Pause	22
Before you start	12	Flex control	22
Cooking zones	12	Sound on/off	23
Control panel	12	Suggested settings for cooking specific foods	23
Induction heating	13	Maintaining your appliance	24
The key features of your appliance	13	Hob	24
Safety shutoff	14	Light soiling	24
Virtual flame technology	15	Stubborn soiling	24
Residual heat indicator	15	Problem dirt	25
Temperature detection	15	Hob frame (option)	25
Initial cleaning	16	To avoid damaging your appliance	25
Cookware for induction cooking zones	16	Warranty and service	26
Suitability test	16	FAQs and troubleshooting	26
Size of pans	16	Service	27
Operating noises	17	Technical data	28
Using suitable cookware	17	Technical data	28
		Cooking zones	28
		Product information	28

Using this manual

Please take the time to read this owner's manual, paying particular attention to the safety information contained in the following section, before using your appliance. Keep this manual for future reference.

If transferring ownership of the appliance, please remember to pass the manual on to the new owner.

The following symbols are used in this User Manual:

WARNING

Hazards or unsafe practices that may result in **severe personal injury or death**.

CAUTION

Hazards or unsafe practices that may result in **minor personal injury or property damage**.

CAUTION

To reduce the risk of fire, explosion, electric shock, or personal injury when using your hob, follow these basic safety precaution.

NOTE

Useful tips, recommendations, or information that helps users manipulate the product.

Model name & serial number

Both the model name and the serial number are labeled underneath the hob base.

For later use, write down the information or attach the additional product label (located on the top of the product) onto the current page.

Model Name _____

Serial Number _____

Safety instructions

The safety aspects of this appliance comply with all accepted technical and safety standards. However, as manufacturers we also believe it is our responsibility to familiarize you with the following safety instructions.

WARNING

This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

Children should be supervised to ensure that they do not play with the appliance.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision. The means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

Safety instructions

This Appliance should be allowed to disconnection from the supply after installation. The disconnection may be achieved by having the plug accessible or by incorporating a switch in the fixed wiring in accordance with the wiring rules.

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

The method of fixing stated is not to depend on the use of adhesives since they are not considered to be a reliable fixing means.

WARNING: If the surface is cracked, switch off the appliance to avoid the possibility of electric shock.

During use the appliance becomes hot. Care should be taken to avoid touching heating elements inside the hob.

WARNING: Accessible parts may become hot during use. Young children should be kept away.

A steam cleaner is not to be used.

Metallic objects such as knives, forks, spoons and lids should not be placed on the hob surface since they can get hot.

After use, switch off the hob element by its control and do not rely on the pan detector.

The appliance is not intended to be operated by means of an external timer or separate remote-control system.

CAUTION: The cooking process has to be supervised. A short term cooking process has to be supervised continuously.

The appliance must not be installed behind a decorative door in order to avoid overheating.

WARNING: The appliance and its accessible parts become hot during use. Care should be taken to avoid touching heating elements. Children less than 8 years of age shall be kept away unless continuously supervised.

WARNING: Unattended cooking on a hob with fat or oil can be dangerous and may result in a fire.

NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.

WARNING: Danger of fire: Do not store items on the cooking surfaces.

WARNING: Use only hob guards designed by the manufacturer of the cooking appliance or indicated by the manufacturer of the appliance in the instructions for use as suitable or hob guards incorporated in the appliance. The use of inappropriate guards can cause accidents.

The surfaces are liable to get hot during use.

This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

Keep the appliance and its cord out of reach of children less than 8 years.

⚠ CAUTION

Be sure the appliance is properly installed and grounded by a qualified technician.

The appliance should be serviced only by qualified service personnel. Repairs carried out by unqualified individuals may cause injury or serious malfunction. If your appliance is in need of repair, contact your local service centre. Failure to follow these instructions may result in damage and void the warranty. Flush - mounted appliances may be operated only after they have been installed in cabinets and workplaces that conform to the relevant standards. This ensures sufficient protection against contact for electrical units as required by the essential safety standards.

If your appliance malfunctions or if fractures, cracks or splits appear:

- switch off all cooking zones;
- disconnect the hob from the mains supply; and
- contact your local service centre.

If the hob cracks, turn the appliance off to avoid the possibility of electric shock. Do not use your hob until the glass surface has been replaced.

Safety instructions

Do not use the hob to heat aluminium foil, products wrapped in aluminium foil or frozen foods packaged in aluminium cookware.

Liquid between the bottom of the pan and the hob can produce steam pressure. Which may cause the pan to jump.

Always ensure that the hotplate and the base of the pan are kept dry.

The cooking zones will become hot when you cook.

Always keep small children away from the appliance.

Keep all packaging materials well out of the reach of children, as packaging materials can be dangerous to children.

This appliance is to be used only for normal cooking and frying in the home. It is not designed for commercial or industrial use.

Never use the hob for heating the room.

Take care when plugging electrical appliances into mains sockets near the hob. Mains leads must not come into contact with the hob.

Overheated fat and oil can catch fire quickly. Never leave surface units unattended when preparing foods in fat or oil, for example, when cooking chips.

Turn the cooking zones off after use.

Always keep the control panels clean and dry.

Never place combustible items on the hob, it may cause fire.

There is the risk of burns from the appliance if used carelessly.

Cables from electrical appliances must not touch the hot surface of the hob or hot cookware.

Do not use the hob to dry clothes.

Users with Pacemakers and Active Heart Implants must keep their upper body at a minimum distance of 30 cm from induction cooking zones when turned on. If in doubt, you should consult the manufacturer of your device or your doctor. (Induction hob model only)

Do not attempt to repair, disassemble, or modify the appliance yourself.

Always turn the appliance off before cleaning.

Clean the hob in accordance with the cleaning and care instructions contained in this manual.

Keep pets away from the appliance because pets may step on the controls of the appliance, causing an malfunction.

Disposing of the packaging material

WARNING

All materials used to package the appliance are fully recyclable. Sheet and hard foam parts are appropriately marked. Please dispose of packaging materials and old appliances with due regard to safety and the environment.

Proper disposal of your old appliance

WARNING

Before disposing of your old appliance, make it inoperable so that it cannot be a source of danger. To do this, have a qualified technician disconnect the appliance from the mains supply and remove the mains lead. The appliance may not be disposed of in the household rubbish. Information about collection dates and public refuse disposal sites is available from your local refuse department or council.

Correct Disposal of This Product (Waste Electrical & Electronic Equipment)



(Applicable in countries with separate collection systems)

This marking on the product, accessories or literature indicates that the product and its electronic accessories (e.g. charger, headset, USB cable) should not be disposed of with other household waste at the end of their working life. To prevent possible harm to the environment or human health from uncontrolled waste disposal, please separate these items from other types of waste and recycle them responsibly to promote the sustainable reuse of material resources.

Household users should contact either the retailer where they purchased this product, or their local government office, for details of where and how they can take these items for environmentally safe recycling.

Business users should contact their supplier and check the terms and conditions of the purchase contract. This product and its electronic accessories should not be mixed with other commercial wastes for disposal.

For information on Samsung's environmental commitments and product-specific regulatory obligations, e.g. REACH, WEEE, Batteries, visit : samsung.com/uk/aboutsamsung/samsungelectronics/corporatecitizenship/data_corner.html

Installing the hob

WARNING

Be sure the new appliance is installed and grounded only by qualified personnel. Please observe this instruction. The warranty will not cover any damage that may occur as a result of improper installation.

Technical data is provided at the end of this manual.

Safety instructions for the installer

- A device must be provided in the electrical installation that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm. Suitable isolation devices include line protecting cut - outs, fuses (screw type fuses are to be removed from the holder), earth leakage trips and contactors.
- With respect to fire protection, this appliance corresponds to EN 60335 - 2 - 6. This type of appliance may be installed with a high cupboard or wall on one side.
- The installation must guarantee shock protection.
- The kitchen unit in which the appliance is fitted must satisfy the stability requirements of DIN 68930.
- For protection against moisture, all cut surfaces are to be sealed with a suitable sealant.
- On tiled work surfaces, the joints in the area where the hob sits must be completely filled with grout.
- On natural, artificial stone, or ceramic tops, the snap action springs must be bonded in place with a suitable artificial resin or mixed adhesive.
- Ensure that the seal is correctly seated against the work surface without any gaps. Additional silicon sealant must not be applied; this would make removal more difficult when servicing.
- The hob must be pressed out from below when removed.
- A board can be installed underneath the hob.
- The ventilation gap between the worktop and front of the unit underneath it must not be covered.

Connecting to the mains power supply

Before connecting, check that the nominal voltage of the appliance, that is, the voltage stated on the rating plate, corresponds to the available supply voltage. The rating plate is located on the lower casing of the hob.

WARNING

Shut off power to circuit before connecting wires to circuit.

The heating element voltage is AC 230 V~. The appliance also works perfectly on networks with AC 220 V~ or AC 240 V~. The hob is to be connected to the mains using a device that allows the appliance to be disconnected from the mains at all poles with a contact opening width of at least 3 mm, eg. automatic line protecting cut - out, earth leakage trips or fuse.

WARNING

The cable connections must be made in accordance with regulations and the terminal screws tightened securely.

WARNING


Once the hob is connected to the mains supply, check that all cooking zones are ready for use by briefly switching each on in turn at the maximum setting with suitable cookware.

WARNING

Pay attention (conformity) to phase and neutral allocation of house connection and appliance (connection schemes); otherwise, components can be damaged. Warranty does not cover damage resulting from improper installation.


WARNING

If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

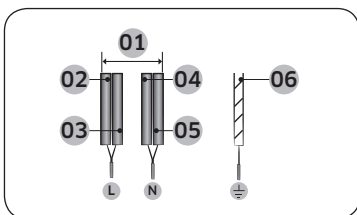


1N~ (32A)

01	220-240 V ~	04	Blue
02	Brown	05	Gray
03	Black	06	Green/Yellow

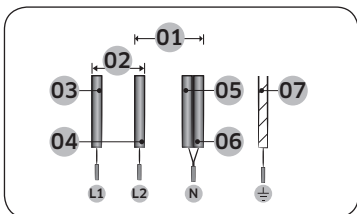

2N~ (16A): Separate the 2-phase wires (L1 and L2) before connection.

01	220-240 V ~	05	Blue
02	380-415 V ~	06	Gray
03	Brown	07	Green/Yellow
04	Black		

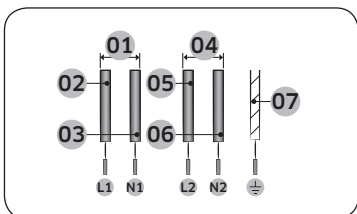


2 x 1N~ (16A): Separate the wires before connection.

01	220-240 V ~	05	Black
02	Brown	06	Gray
03	Blue	07	Green/Yellow
04	220-240 V ~		

⚠ WARNING

For correct supply connection, follow the wiring diagram attached near the terminals.

Installing into the countertop

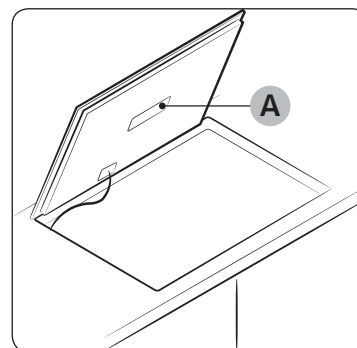

A. Serial number

NOTE


Make a note of the serial number on the appliance rating label prior to installation. This number will be required in the case of requests for service and is no longer accessible after installation, as it is on the original rating plate on the underside of the appliance.

NOTE

Pay special attention to the minimum space and clearance requirements.

NOTE


The bottom of the hob is equipped with two fans. If there is a drawer under the hob it should not be used to store small objects or paper, since they could damage the fan or interfere with the cooling if they are sucked into it.

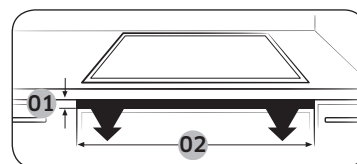


01	Min. 2 mm
02	560 mm



Installing the hob

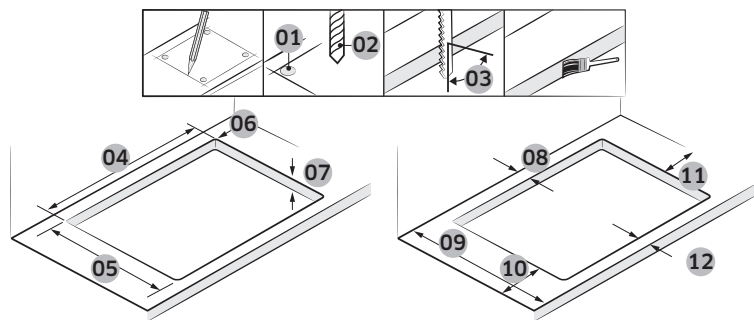


01	x 4	07	Max. 50 mm, Min. 20 mm
02	Ø 6	08	Min. 60 mm
03	90 °	09	Min. 600 mm
04	750±1 mm	10	Min. 60 mm
05	490±1 mm	11	Min. 60 mm
06	R3	12	Min. 50 mm

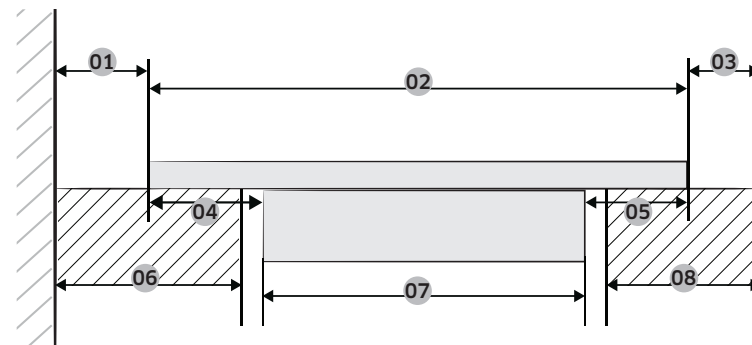


01	Min. 40 mm	05	15 mm
02	520 mm	06	Min. 60 mm
03	Min. 40 mm	07	480 mm
04	25 mm	08	Min. 50 mm





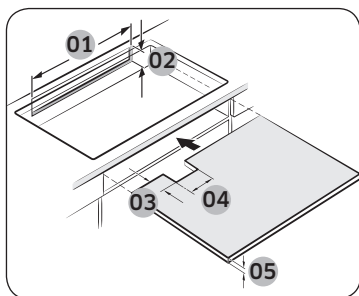


01	Min. 550 mm
02	Min. 35 mm
03	Min. 65 mm
04	Min. 100 mm
05	Min. 5 mm

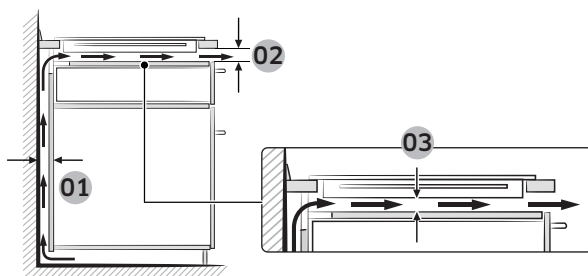

01	Min. 20 mm
02	Min. 2 mm
03	Min. 20 mm

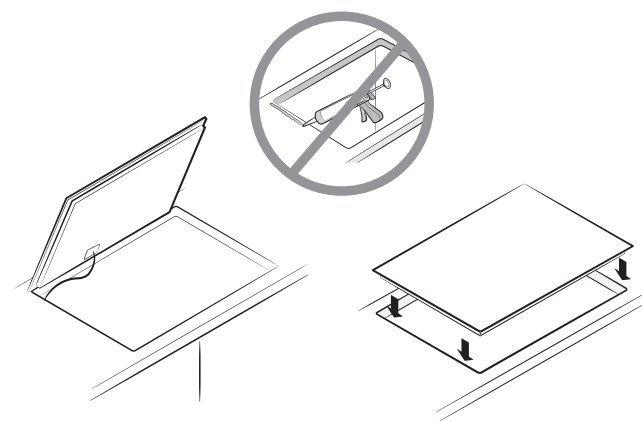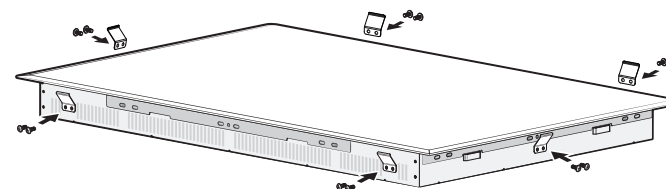


Components

 


Induction hob



 Bracket Spring




Screws

 

Magnetic Knob


Before you start

Cooking zones

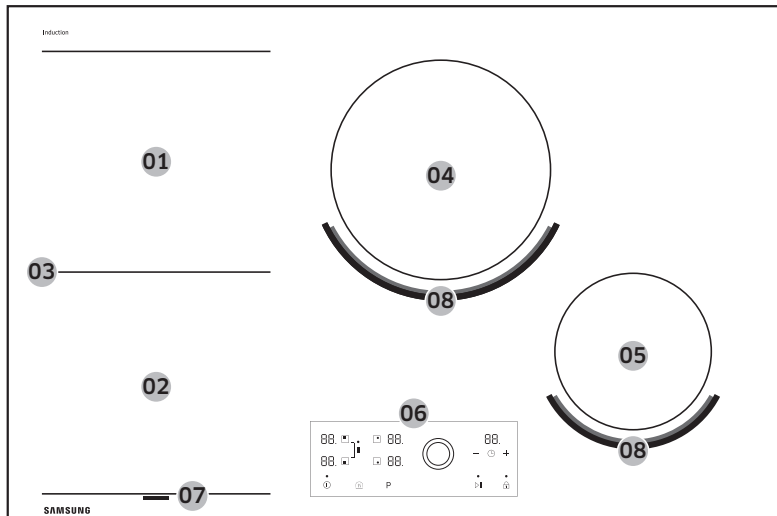


01	Induction rear Wide Flex zone 1800 W with Power Boost 2600 W
02	Induction front Wide Flex zone 1800 W with Power Boost 2600 W
03	Induction complete Wide Flex zone 3300 W with Power Boost 3600 W
04	Induction cooking zone 2200 W with Power Boost 3200 W
05	Induction cooking zone 1200 W with Power Boost 2000 W
06	Control panel
07	Lighting Bar
08	Virtual Flame Technology™

Control panel

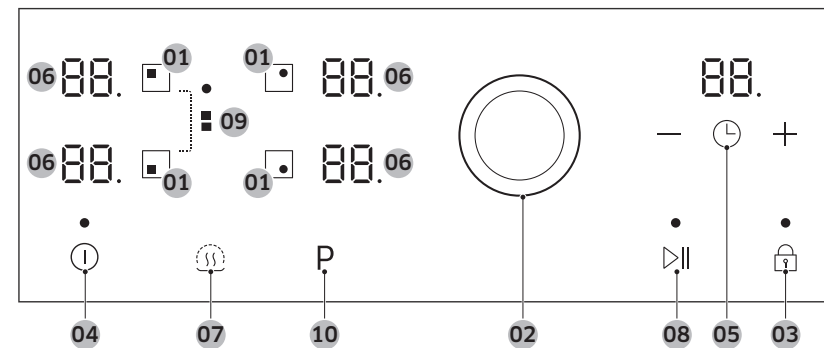

01	Cooking zone buttons
02	Magnetic knob (Power level setting)
03	Lock button
04	On/Off button
05	Timer buttons and display
06	Cooking zone display
07	Keep warm button
08	Pause button
09	Wide Flex zone button
10	Power Boost button

Induction heating

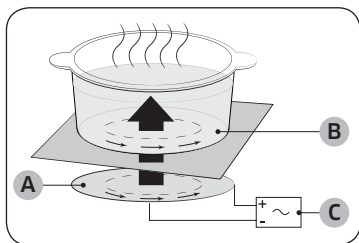

- A. Induction coil
- B. Induced currents
- C. Electronic circuits




 

- **The Principle of Induction Heating:** When you place your cookware on a cooking zone and you turn it on, the electronic circuits in your induction hob produce “induced currents” in the bottom of the cookware which instantly raise cookware’s temperature.
- **Greater speed in cooking and frying:** As the pan is heated directly and not the glass, the efficiency is greater than in other systems because no heat is lost. Most of the energy absorbed is transformed into heat.

The key features of your appliance

- **Ceramic glass cooking surface:** The appliance has a ceramic glass cooking surface and four rapid - response cooking zones.
- **Touch buttons:** Your appliance is operated using touch buttons.
- **Easy cleaning:** One advantage of the ceramic glass cooking surface and The detachable control knob is their accessibility. The smooth, flat surface is easy to clean.
- **On/Off button:** The On/Off button provides the appliance with a separate mains switch. Touching this sensor switches the power supply on or off completely.
- **Control and function indicators:** Digital displays and indicator lights provide information about settings and activated functions, as well as the presence of residual heat in the various cooking zones.
- **Safety shutoff:** A safety shutoff ensures that cooking zones switch off automatically after a period of time if the setting has not been changed.
- **Power Boost P:** Use this function to heat up the contents of the pan faster than maximum power level 15. (The display will show P.)
- **Auto Pan-Detection:** Each cooking zone incorporates an automatic pan-detection system, the system is calibrated in order to recognize pans of a diameter just slightly smaller than the cooking zone. Pans must always be placed centrally on each cooking zone. And you should use suitable cookware.
- **Digital displays:**
 - [H] to 15, P selected power level
 - [H] residual heat (Stay Hot)
 - [H] residual heat
 - [L] the child lock is activated
 - [d] message, the touch sensor button has been touched for longer than 8 seconds.
 - [E] message, when the hob is overheated because of abnormal operation. (example : operation with empty cookware)
 - [E] message, cookware is unsuitable or too small or no cookware has been placed on the cooking zone.





Before you start

- **Keep warm** : Use this function to keep cooked food warm. The display will show .
- **Pause** : Use this function to switch all cooking zones on to the low power setting. (example : to take a telephone call) The display will show .
- **Wide Flex zone** : Use this function to expand cooking zone into complete left side. The Wide Flex zone is a large, rectangle-shaped area designed for cooking multiple dishes.
- **Virtual Flame™**: Get hassle free because inform you 'Creating food now on the cooktop' by visually telling.
- **Magnetic knob**: The power control is easy, simple and intuitive by using magnetic knob.
- **Quick Stop**: This option reduces the step and time it takes to stop cooking by simple one touch.

Safety shutoff

If one of the cooking zones is not switched off or the heat setting is not adjusted after an extended period of time, that particular cooking zone will automatically switch itself off.

Any residual warmth will be indicated with ,  (for "hot") in the digital displays corresponding to the particular cooking zones.


The cooking zones switch themselves off at the following times.

Heat setting	Switch off
1-3	After 6 hours
4-6	After 5 hours
7-9	After 4 hours
10-15	After 1.5 hours

NOTE

If the Hob is overheated because of abnormal operation,  will be displayed. And the Hob will be switched off.

NOTE

If cookware is unsuitable or too small or no cookware has been placed on the cooking zone,  will be displayed.


And after 1 minute the corresponding cooking zone will be switched off.

NOTE

Should one or more of the cooking zones switch off before the indicated time has elapsed, see the section "FAQs and troubleshooting".


Other reasons why a cooking zone will switch itself off

All cooking zones will switch themselves off if liquid boils over and lands on the control panel.

The automatic shutoff will also be activated if you place a damp cloth on the control panel. In both of these instances, the appliance will need to be switched on again using the main **On/Off**  button after the liquid or the cloth has been removed.



Virtual flame technology

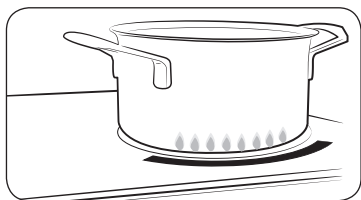

Virtual flame technology creates the appearance of flames when you turn on an induction element.

- Virtual flame technology is available only on the right burner.
- As you turn the knob to adjust the power level, the color of the flames change. (If you select Power Boost, the flames bounce off the cookware.)
- The virtual flame may look different depending on the appearance, size, or position of the cookware. (For the best results, use cookware that matches the element size. Cookware that is too large can cover the virtual flame. Cookware that is too small can cause the virtual flame to be ill-formed.)
- Impurities on the cookware bottom or the cooktop surface can cause the virtual flame to be ill-formed or incomplete. Clean up the cookware or the cooktop surface before using them.

Residual heat indicator

When an individual cooking zone or the hob is turned off, the presence of residual heat is shown with an **H**, **h** (for "hot") in the digital display of the appropriate cooking zones. Even after the cooking zone has been switched off, the residual heat indicator goes out only after the cooking zone has cooled. You can use the residual heat for thawing or keeping food warm.

⚠ WARNING

As long as the residual heat indicator is illuminated, there is a risk of burns.

⚠ WARNING

If the power supply is interrupted, the **H**, **h** symbol will go out and information about residual heat will no longer be available. However, it may still be possible to burn yourself. This can be avoided by always taking care when near the hob.

Temperature detection

If for any reason the temperatures on any of the cooking zones were to exceed the safety levels, should this happen then the cooking zone will automatically reduce to a lower power level.

When you have finished using the hob, the cooling fan will continue to run until the hob's electronics has cooled down. And the cooling fan switched itself off depending upon the temperature of the electronics.

Before you start

Initial cleaning

Wipe the ceramic glass surface with a damp cloth and ceramic cooktop glass cleaner.

⚠ WARNING

Do not use caustic or abrasive cleaners. The surface could be damaged.

Cookware for induction cooking zones

The induction hob can only be turned on when cookware with a magnetic base is placed on one of the cooking zones. You can use the following suitable cookware.

Cookware material

Cookware material	Suitable
Steel, Enamelled steel	Yes
Cast iron	Yes
Stainless steel	If appropriately labelled by the manufacturer
Aluminium, Copper, Brass	No
Glass, Ceramic, Porcelain	No

📖 NOTE

Cookware for induction hob is labelled as suitable by the manufacturer.


📖 NOTE

Certain cookware can make noise when being used on induction cooking zones. These noise are not a fault in the appliance and do not affect operation in any way.

📖 NOTE

Non-stainless containers are less in heat conductivity compared to stainless containers, taking more time to cook.

Suitability test

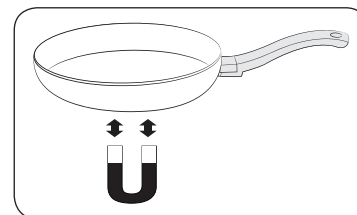

Cookware is suitable for induction cooking, if a magnet sticks to the bottom of the cookware and cookware is labelled as suitable by the cookware manufacturer.

📖 NOTE

Can be suitability test using the Magnetic Knob.

📖 NOTE

Induction cooking may not function properly on nonferrous cookware whose edge doesn't stick to the magnet, or on nonferrous cookware whose bottom is iron-coated.

Size of pans

Induction cooking zones adapt automatically to the size of the bottom of the cookware up to a certain limit. However the magnetic part of the bottom of the cookware must have a minimum diameter depending upon the size of the cooking zone.

Diameter of cooking zones	Minimum diameter of the bottom of the cookware
220 mm	140 mm
160 mm	100 mm
Front or Rear Flex	140 mm
Complete Flex	240 mm (long side dimension), oval, fish kettle

Operating noises

If you can hear.

- **Cracking noise:** cookware is made of different materials.
- **Whistling:** you use more than two cooking zones and the cookware is made of different materials.
- **Humming:** you use high power levels.
- **Clicking:** electric switching occurs.
- **Hissing, Buzzing:** the fan operates.


The noise are normal and do not refer to any defects.

Using suitable cookware

Better pans produce better results.

- You can recognise good pans by their bases. The base should be as thick and flat as possible.
- When buying new pans, pay particular attention to the diameter of the base. Manufacturers often give only the diameter of the upper rim.
- Do not use pans which have damaged bases with rough edges or burrs. Permanent scratching can occur if these pans are slid across the surface.
- When cold, pan bases are normally bowed slightly inwards (concave). They should never be bowed outwards (convex).
- If you wish to use a special type of pan, for example, a pressure cooker, a simmering pan, or a wok, please observe the manufacturer's instructions.

Energy saving tips

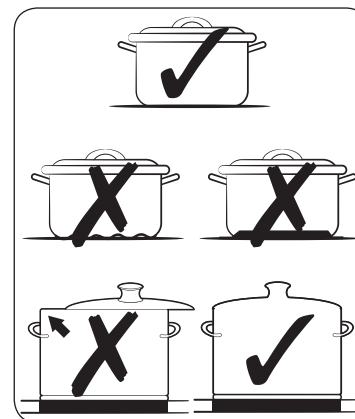

NOTE

You can save valuable energy by observing the following points.

- Always position pots and pans before switching on the cooking zone.
- Dirty cooking zones and pan bases increase power consumption.
- When possible, position the lids firmly on the pots and pans to cover completely.
- Switch the cooking zones off before the end of the cooking time to use the residual heat for keeping foods warm or for thawing.




Operation

Using the touch buttons

To operate the touch buttons, touch the desired button with the tip of your pointed finger until the relevant displays illuminate or go out, or until the desired function is activated.

Ensure that you are touching only one button when operating the appliance. If your finger is too flat on the button, an adjacent button may be actuated as well.

Switching the appliance on

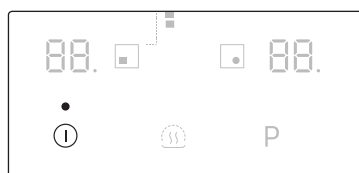


The appliance is switched on using the **On/Off** ① button. Press the **On/Off** ① button for approximately 1 second. The digital displays will show **88**.


NOTE

After the **On/Off** ① button has been actuated to switch on your appliance, a heat setting must be selected within approximately 20 seconds. Otherwise, the appliance will switch itself off for safety reasons.

Select cooking zone and power level setting

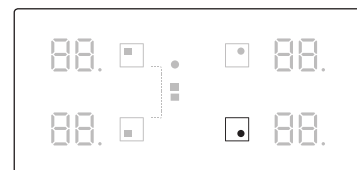

1. For selecting the cooking zone, press the corresponding cooking zone button.

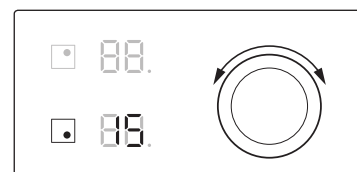


2. Turn the magnetic knob to set the power level.

NOTE

- The default level is set to 15 when selecting the cooking zone.
- If more than one button is pressed for longer than 8 seconds, **d8** will show in the heat setting display. To reset, press the **On/Off** ① button.
- If you try to turn the magnetic knob by grabbing the side or pushing it strongly, it will not work.
- If you try to turn the magnetic knob with gloves on, the knob may not work.



Switching the appliance off

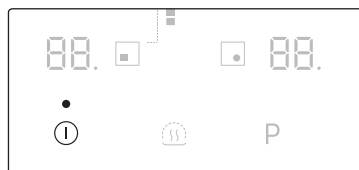


To completely switch off the appliance, use the **On/Off** ① button.
Press and hold the **On/Off** ① button for 1 second.

NOTE

After switching off a single cooking zone or the entire cooking surface, the presence of residual heat will be indicated in the digital displays of the corresponding cooking zones in the form of an **H**, **H** (for "hot").

Quick stop

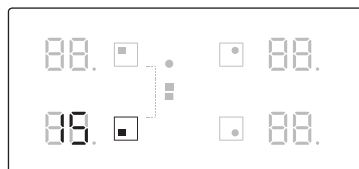


To switch off a cooking zone, press and hold the cooking zone button for 2 seconds.


Using the child safety lock

You can use the child safety lock to safeguard against unintentionally turning on a cooking zone and activating the cooking surface. Also the control panel, with the exception of the **On/Off** ① button, can be locked in order to prevent the settings from being changed unintentionally, for example, by wiping over the panel with a cloth.

Switching the child safety lock On/Off

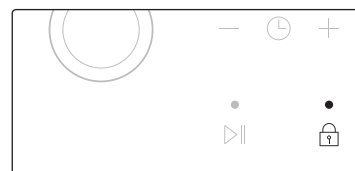

1. Press and hold the **Lock** ① button for approximately 3 seconds.
An acoustic signal will sound as confirmation.

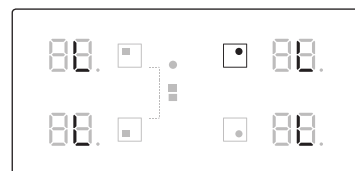

2. Touch any button.
HL will appear in the displays, indicating the child safety lock has been activated.
3. For switching the child safety lock off, press and hold the **Lock** ① button for 3 seconds. An acoustic signal will sound as confirmation.



Operation


Timer

Using the timer as a safety shutoff:

If a specific time is set for a cooking zone, the cooking zone will shut itself off once this period of time has elapsed. This function can be used for multiple cooking zones simultaneously.

Setting the safety shutoff

The cooking zone(s) for which you want to apply the safety shutoff must be switched on.

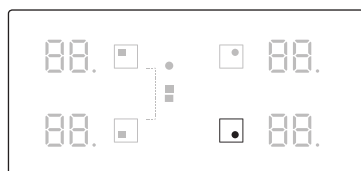

1. After switched on, press the corresponding cooking zone button to activate the flash signal for the corresponding cooking zone display.



2. Press the **Timer** ⌚ button. The number 10 will be displayed above the timer display.



3. Press the **Timer setting buttons** (← or →) or turn the magnetic knob to set the desired time. The safety shutoff is now activated.

NOTE

The timer can be adjusted from 0 to 99.



4. To cancel the timer settings, press the target cooking zone button, and then press and hold the **Timer** ⌚ button for 2 seconds. This will cancel the cooking zone's timer settings with a beep. If holding down the **Timer** ⌚ button for 2 seconds without selecting a burner, this will cancel the timer settings of the last changed burner.

To display the time remaining for any of the cooking zones, use the **Timer** ⌚ button.

The corresponding cooking zone display will begin to blink slowly.

The settings are reset using the **Timer setting buttons** (← or →). After the set period of time has elapsed, the cooking zone automatically switches itself off, an acoustic signal sounds as confirmation and the timer display indicates.

NOTE

If you press the **Timer** ⌚ button without selecting a cooking zone, the display turns on but no timer settings is applied.

NOTE

To change the settings quicker, touch and hold any of the **+** or **−** buttons until the desired value is reached.



Count up timer

For the count up timer to be used, the appliance must be switched on but all the cooking zones must be not use timer as a safety shutoff.




1. Press the **Timer** ⌚ button.
00 will appear in the timer display.




2. The count up timer function becomes active and the display numbers increase over time. To cancel the timer settings, press and hold the **Timer** ⌚ button for 2 seconds.
3. To stop the timer, press the **Timer** ⌚ button.

Using keep warm

Keep warm function keeps food at the proper temperature without over-cooking, so it stays deliciously warm.

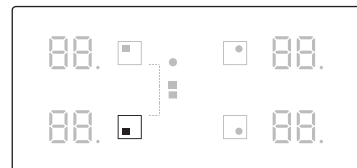

1. Use this function to Keep cooked food Warm. Press the corresponding cooking zone button.

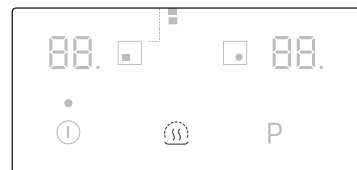

2. Press the **Keep warm** ⌚ button.



Operation

Power boost

The **Power Boost P** function makes additional power available to the each cooking zones. (example : bring a large volume of water to the boil)

Cooking zones	Max Boost time
220 mm	10 min
160 mm	10 min
Front or Rear Flex	10 min
Complete Flex	5 min

After these times, the cooking zones automatically return to power level 15.


NOTE

In certain circumstances, the Power Boost function may be deactivated automatically to protect the internal electronic components of the hob.

Power management

The cooking zones have a maximum power available to them.

If this power range is exceeded by switching on the **Power Boost P** function, Power Management automatically reduced the heat setting of cooking zone.

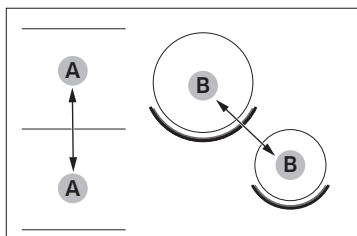




- A. Paired cooking zone
- B. Paired cooking zone

The display for this cooking zone alternates for some seconds between the set heat setting and the maximum possible heat setting. After then, the display changes from the set power level to maximum possible power level.

Pause

The **Pause ▷||** function simultaneously switches all cooking zones that are switched on to the low power setting and then back to the heat setting that was previously set. This function can be used to briefly interrupt and then continue the cooking process e.g. to take a telephone call.

When the **Pause ▷||** function is activated, all buttons except for the **Pause ▷||**, **Lock**  and the **On/Off**  buttons are disabled. To resume cooking, press the **Pause ▷||** button again.

 
	Control Panel	Display
To Switch On	Press the Pause ▷ 	
To Switch Off	Press the Pause ▷ 	Return to previous power level

NOTE


Timer functions are not stopped by the **Pause ▷||** button.

Flex control

The flex function can operate complete left side cooking zone for using large size cookware. (example : oval cookware, fish kettle)

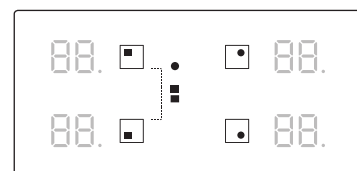


1. Press the **Wide Flex zone**  button.

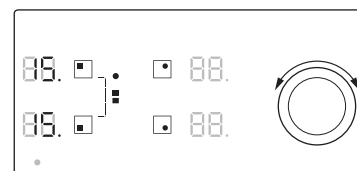


2. Turn the magnetic knob to set the power level. Power level display of left side (front, rear) will be changed together.




Sound on/off

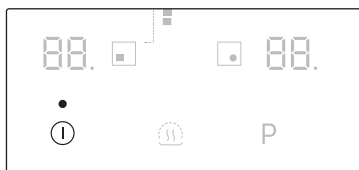


1. Press and hold the **On/Off** ① button for approximately 1 second to power on.

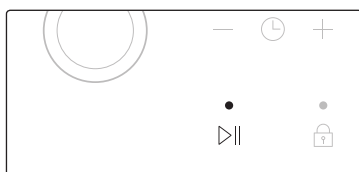

2. Press and hold the **Pause** ▷|| button for 3 seconds within 10 seconds after power on.

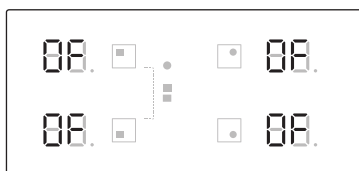

3. Sound will off and **OFF** will show in the cooking zone display.

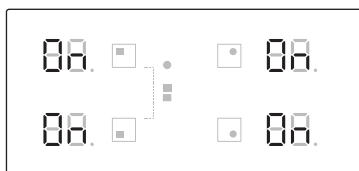

4. To change Sound setting, repeat No. 1 and No. 2 procedure. Sound will on and **On** will show in the Timer display.

NOTE

After power on, It is not possible to operate sound **On/Off** ① button 10 seconds later.

Suggested settings for cooking specific foods

The figures in the table below are guidelines. The heat settings required for various cooking methods depend on a number of variables, including the quality of the cookware being used and the type and amount of food being cooked.

Switch setting	Cooking method	Examples for Use
14-15	Warming Sautéing Frying	Warming large amounts of liquid, boiling noodles, searing meat, browning goulash, braising meat
10-13	Intensive Frying	Steak, sirloin, hash browns, sausages, pancakes / griddle cakes
8-9	Frying	Schnitzel / chops, liver, fish, rissoles, fried eggs
6-7	Boiling	Cooking up to 1.5 l liquid, potatoes, vegetables
3-5	Steaming Stewing Boiling	Steaming and stewing of small amounts of vegetables, boiling rice and milk dishes
1-2	Melting	Melting butter, dissolving gelatine, melting chocolate

NOTE

- The heat settings indicated in the table above are provided only as guidelines for your reference.
- You will need to adjust the heat settings according to specific cookware and foods.

Maintaining your appliance

Hob

⚠ WARNING

Cleaning agents must not come into contact with a heated ceramic glass surface: All cleaning agents must be removed with adequate amounts of clean water after cleaning because they can have a caustic effect when the surface becomes hot. Do not use any aggressive cleaners such as grill or oven sprays, scouring pads or abrasive pan cleaners.


📖 NOTE

Clean the ceramic glass surface after each use when it is still warm to the touch. This will prevent spillage from becoming burnt onto the surface. Remove scales, watermarks, fat drippings and metallic discolouration with the use of a commercially available ceramic glass or stainless steel cleaner.

Light soiling

1. Wipe the ceramic glass surface with a damp cloth.
2. Rub dry with a clean cloth. Remnants of cleaning agent must not be left on the surface.
3. Thoroughly clean the entire ceramic glass cooking surface once a week with a commercially available ceramic glass or stainless steel cleaner.
4. Wipe the ceramic glass surface using adequate amounts of clean water and rub dry with a clean lint - free cloth.

Stubborn soiling

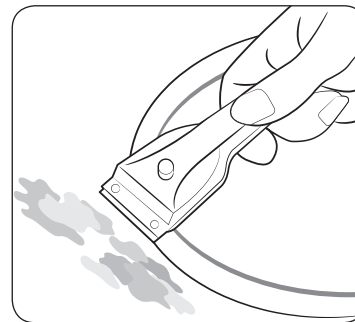


1. To remove food that has boiled over and stubborn splashes, use a glass scraper.
2. Place the glass scraper at an angle to the ceramic glass surface.
3. Remove soiling by scraping with the blade.

📖 NOTE

Glass scrapers and ceramic glass cleaners are available from specialty retailers.

Problem dirt

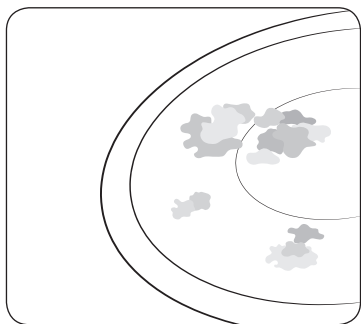

1. Remove burnt-on sugar, melted plastic, aluminium foil or other materials with a glass scraper immediately and while still hot.

WARNING

There is a risk of burning yourself when the glass scraper is used on a hot cooking zone:

2. Clean the hob as normal when it has cooled down. If the cooking zone on which something has melted has been allowed to cool, warm it up again for cleaning.

NOTE

Scratches or dark blemishes on the ceramic glass surface, caused, for example, by a pan with sharp edges, cannot be removed. However, they do not impair the function of the hob.

Hob frame (option)

WARNING

Do not use vinegar, lemon juice or scale remover on the hob frame; otherwise dull blemishes will appear.

1. Wipe the frame with a damp cloth.
2. Moisten dried debris with a wet cloth. Wipe and rub dry.

To avoid damaging your appliance

- Do not use the hob as a work surface or for storage.
- Do not operate a cooking zone if there is no pan on the hob or if the pan is empty.
- Ceramic glass is very tough and resistant to temperature shock, but it is not unbreakable. It can be damaged by a particularly sharp or hard object dropping onto the hob.
- Do not place pans on the hob frame. Scratching and damage to the finish may occur.
- Avoid spilling acidic liquids, for example, vinegar, lemon juice and descaling agents, onto the hob frame, since such liquids can cause dull spots.
- If sugar or a preparation containing sugar comes into contact with a hot cooking zone and melts, it should be cleaned off immediately with a kitchen scraper while it is still hot. If allowed to cool, it may damage the surface when removed.
- Keep all items and materials that could melt, for example, plastics, aluminium foil and oven foils, away from the ceramic glass surface. If something of this nature melts onto the hob, it must be removed immediately with a scraper.

 
 
Warranty and service

FAQs and troubleshooting

A fault may result from a minor information that you can correct yourself with the help of the following instructions. Do not attempt any further repairs if the following instructions do not help in each specific case.

⚠ WARNING

Repairs to the appliance are to be performed only by a qualified service technician. Improperly effected repairs may result in considerable risk to the user. If your appliance needs repair, please contact your customer service centre.

Problem	Possible cause	Solution
What should I do if the cooking zones are not functioning?	<ul style="list-style-type: none"> The fuse in the house wiring is intact. The control indicators in the control panel are illuminated. 	<ul style="list-style-type: none"> If the fuses trip a number of times, call an authorised electrician. The appliance is properly switched on.
What should I do if the cooking zones will not switch on?	<ul style="list-style-type: none"> The On/Off ① button was accidentally actuated. The control panel is partially covered by a damp cloth or liquid. 	<ul style="list-style-type: none"> The appliance is properly switched on. Clean the control panel.
What should I do if the display except for  ,  the residual warmth indicator suddenly disappears?	<ul style="list-style-type: none"> The On/Off ① button was accidentally actuated. The control panel is partially covered by a damp cloth or liquid. 	<ul style="list-style-type: none"> The appliance is properly switched on. Clean the control panel.
What should I do if, after the cooking zones have been switched off, residual warmth is not indicated in the display.	<ul style="list-style-type: none"> The cooking zone was only briefly used and therefore did not become hot enough. 	<ul style="list-style-type: none"> If the cooking zone is hot, please call the customer service center.

Information code	Possible cause	Solution
C0	Check the Auto Cook sensor.	Restart the appliance using the On/Off ① button. If the problem continues, disconnect power for more than 30 seconds. Then, restart the appliance and try again. If the problem still continues, contact a local service center.
C1	The temperature is sensed higher than specified.	
C2	Check the Auto Cook sensor.	
A2	The DC Motor fails to operate because of problems with the PCB or wiring, or electrical disturbance on the motor blade.	Check if the sensor pad is wet or pressed. If the problem continues, restart the appliance using the On/Off ① button. If the problem still continues, contact a local service center.
d0	The sensor is pressed for more than 8 seconds.	
F0	Communications between main and sub PCBs fail.	Restart the appliance using the On/Off ① button. If the problem continues, disconnect power for more than 30 seconds. Then, restart the appliance. If the problem still continues, contact a local service center.
F2	The touch-enabled IC communicates abnormally.	

What should I do if the cooking zone will not switch on or off?

This could be due to one of the following possibilities:

- The control panel is partially covered by a damp cloth or liquid.
- The child safety lock is on.

What should I do if the display is illuminated?

Check for the following:

- The control panel is partially covered by a damp cloth or liquid. To reset, press the **On/Off** ① button.
- If liquid has overflowed on control panel, please wipe the liquid.

What should I do if the display is illuminated?

Check for the following:

- The hob is overheated because of abnormal operation.
- After hob is cooled down, press the **On/Off** ① button for resetting.

What should I do if the display is illuminated?

Check for the following:

- Cookware is unsuitable or too small or no cookware has been placed on the cooking zone.
- If you use suitable cookware, displayed message will automatically disappear.

What should I do if the cooling fan runs after the hob is turned off?

Check for the following:

- When you have finished using the hob, the cooling fan runs by itself for cooling down.
- After the hob's electronics has cooled down, the cooling fan will be turned off.
- If you request a service call because of an information made in operating the appliance, the visit from the customer service technician may incur a charge even during the warranty period.

Service

Before calling for assistance or service, please check the section “**FAQs and troubleshooting**”.

If you still need help, follow the instructions below.

Is it a technical fault?

If so, please contact your customer service centre.

Always prepare in advance for the discussion. This will ease the process of diagnosing the problem and also make it easier to decide if a customer service visit is necessary.

Please take note of the following information.

- What form does the problem take?
- Under what circumstances does the problem occur?

When calling, please know the model and serial number of your appliance. This information is provided on the rating plate as follows:

- Model description
- S/N code (15 digits)

We recommend that you record the information here for easy reference.

- Model:
- Serial number:

When do you incur costs even during the warranty period?

- If you could have remedied the problem yourself by applying one of the solutions provided in the section “**FAQs and troubleshooting**”.
- If the customer service technician has to make several service calls because he was not provided with all of the relevant information before his visit and as a result, for example, has to make additional trips for parts. Preparing for your phone call as described above will save you the cost of these trips.

Technical data

Technical data

Appliance dimensions	Width	800 mm
	Depth	520 mm
	Height	56 mm
Worktop cut - out dimensions	Width	750 mm
	Depth	490 mm
	Corner radius	3 mm
Connection voltage		220-240 V ~ 50 / 60 Hz
Maximum connected load power		7.0 kW
Weight	Net	16.5 kg
	Gross	19.5 kg

Cooking zones

Position	Diameter	Power
Front right	160 mm	1200 W / Boost 2000 W
Center	220 mm	2200 W / Boost 3200 W
Front Flex	-	1800 W / Boost 2600 W
Rear Flex	-	1800 W / Boost 2600 W
Complete Flex	-	3300 W / Boost 3600 W

Product information

Supplier's name	Samsung Electronics co. Ltd.
Model identification	NZ84T9770EK
Type of hob	Built-In
Heating technology	Induction cooking zones and cooking area
Number of cooking zones and/or areas	3
For circular cooking zones or area: diameter of useful surface area per electric heated cooking zone (Ø)	16.0 cm, 22.0 cm
For non-circular cooking zones or areas: length and width of useful surface area per electric heated cooking zone or area (L x W)	43.5 x 22.5 cm
Energy consumption per cooking zone or area calculated per kg (EC _{electric cooking})	Ø 16.0 cm : 193.0 Wh/kg
	Ø 22.0 cm : 176.5 Wh/kg
	43.5 x 22.5 cm : 195.6 Wh/kg
Energy consumption for the hob calculated per kg (EC _{electric hob})	188.4 Wh/kg

* Data determined according to standard EN 60350-2 and Commission Regulations (EU) No 66/2014.

Energy saving tips

- Always position pots and pans before switching on the cooking zone.
- Dirty cooking zones and pan bases increase power consumption.
- Using a pressure cooker reduces cooking time.

Memo

Memo

Memo

QUESTIONS OR COMMENTS?

COUNTRY	CALL	OR VISIT US ONLINE AT
AUSTRIA	0800 72 67 864 (0800-SAMSUNG)	www.samsung.com/at/support
BELGIUM	02-201-24-18	www.samsung.com/be/support (Dutch) www.samsung.com/be_fr/support (French)
DENMARK	707 019 70	www.samsung.com/dk/support
FINLAND	030-6227 515	www.samsung.com/fi/support
FRANCE	01 48 63 00 00	www.samsung.com/fr/support
GERMANY	06196 77 555 77	www.samsung.com/de/support
ITALIA	800-SAMSUNG (800.7267864)	www.samsung.com/it/support
CYPRUS	8009 4000 only from landline, toll free	www.samsung.com/gr/support
GREECE	80111-SAMSUNG (80111 726 7864) only from land line (+30) 210 6897691 from mobile and land line	www.samsung.com/gr/support
LUXEMBURG	261 03 710	www.samsung.com/be_fr/support
NETHERLANDS	088 90 90 100	www.samsung.com/nl/support
NORWAY	21629099	www.samsung.com/no/support
PORTUGAL	808 207 267	www.samsung.com/pt/support
SPAIN	91 175 00 15	www.samsung.com/es/support
SWEDEN	0771 726 786	www.samsung.com/se/support
SWITZERLAND	0800 726 786	www.samsung.com/ch/support (German) www.samsung.com/ch_fr/support (French)
UK	0333 000 0333	www.samsung.com/uk/support
IRELAND (EIRE)	0818 717100	www.samsung.com/ie/support



DG68-00630B-00